

Instruction manual

GF 2281 Conductive multipoint level switch with dual channel relay



Georg Fischer Piping Systems Ltd CH-8201 Schaffhausen
Phone +41(0)52 631 30 26 / info.ps@georgfischer.com /
www.gfps.com

MA_00039_EN_0a (10.19)
© Georg Fischer Rohrleitungssysteme AG
CH-8201 Schaffhausen/Schweiz, 2019
Printed in Switzerland

1 Follow instruction manual

The instruction manual is part of the product and an important element within the safety concept.

- Read and follow instruction manual.
- Always keep instruction manual available for the product.
- Pass on instruction manual to all subsequent users of the product.

2 Intended use

The conductive measuring principle can be applied to liquids with specific conductivity over 10 µS/cm. The switching unit can sense the resistance between probes. Conductivity measurement is suitable only for detecting the presence of liquid at a given level of the tank. This level is represented by the length of the probe.
The level switch consists of a KRK-622-□ type switching unit and the KLN-2□ □ type probes selected according to the task. Probes are to be connected to the KS□-□□□ type probe socket head that can be screwed into the tank.
If the material of the tank or its internal insulation is not conductive then a reference probe should be used in addition to the one, two, three or four probe(s), if the material of the tank is conductive, the tank can be used as a reference probe.
The conductive switch is suitable for filling-emptying control with 2 relay outputs working simultaneously or for level detection of 2 independent levels (in 1 or 2 tanks) with 2 independent relay outputs. More level switches can also be used with one common reference probe "C" using any combination of multiple-probe and single-probe socket.

3 Safety and responsibility

In order to provide safety in the plant, the operator is responsible for the following measures:

- Products may only be used for its intended purpose, see intended use
- Never use a damaged or defective product.
Immediately sort out damaged product.
- Make sure that the piping system has been installed professionally and serviced regularly.
- Products and equipment shall only be installed by persons who have the required training, knowledge or experience.
- Regularly train personnel in all relevant questions regarding locally applicable regulations, safety at work, environmental protection especially for pressurised pipes.
- The personnel is responsible for the following measures:
- Know, understand and follow the instruction manual and the advices therein.

4 Technical Data

4.1 General data

4.1.1 Technical data of the switching unit

Type	KRK-622-1, KRK-622-2	KRK-622-4
Probe voltage	max. 3.5 V AC	
Probe current	< 1 mA AC	
Sensitivity	Adjustable: 5 kΩ – 100 kΩ	
Max. cable capacity	800 nF (sensitivity 5 kΩ) 100 nF (sensitivity 100 kΩ)	
Response time	max. 400 ms	
Setting accuracy (mech.)	±5%	
ON / OFF switching delay	Adjustable: 0.5 – 10 s	
Relay output	2x SPDT	
Switching voltage	250 V AC1, 24 V DC	
Switching current	16 A AC1	
Switching power	4000 VA AC1, 384 W DC	
Electrical strength	4 kV	
Mechanical life-span	3 x 10 ⁷ switches	
Electrical life-span	0.7 x 10 ⁵ switches	
Power supply Un	230 V or 110 V AC	24 V AC/DC
	Galvanically separated (AC 50/60 Hz)	
Voltage range allowed	Nominal voltage -15% ... +10%	
Power consumption	2.5 W / 5 VA (230 V AC, 110 V AC), 1.4 W / 2 VA (24 V AC/DC)	
Ambient temperature	-20 °C ... +55 °C [-4 °F to +131 °F]	
Electrical connection	max. 2.5 mm ² (AWG 14)	
Overvoltage category	II	
Pollution degree	2	
Electrical protection	class II	class III
Ingress protection	IP20	
Mechanical connection	DIN EN 60715 rail	
Mass	248 g	147 g

4.1.2 Technical data of probe sockets

Type	KSK-201	KSP-201	KSS-201	KSN-201	KSH-202	KSH-203	KSH-204	KLN-2□□
Nr. of probes	1				2 probes 1 ref. probe	3 probes + 1 ref. probe	4 probes+ 1 ref. probe	1
Insulation of socket	ABS	PP	PFA					—
Cable gland	Pg 7	M4 nut, rubber cap protected			M20x1.5 cable diameter 6 – 12 mm			—
Process connection	—	□" BSP			1½" BSP			M6
Socket material	—	PP	A44 steel	K035 stainless steel [1.4571]				
Housing material	ABS	—			Paint coated aluminium cast			—
Medium temperature	max. +80 °C (+176 °F)		max. +200 °C (+392 °F)					—
Max. pressure	—	0.3 MPa	1.6 MPa					—
Ingress protection	—	IP20			IP65			—
Mass	0.05 kg	0.1 kg			0.4 kg			0.22 kg/m

4.2 Type numbers

Note: Not all variations available.

K R K - 6 2 2 - □

Power supply	Code
230 V AC	1
110 V AC	2
24 V AC/DC	4

K S □ - □ 0 □

Type	Code	Type	Code	Probes	Code
Cable probe	K	Aluminium housing	2	1 no	1
Single probe, PP socket	P	Plastic housing	3	2 nos + reference probe	2
Single probe, steel socket	S			3 nos + reference probe	3
Single probe, stainless steel socket	N			4 nos + reference probe	4
Multiple probes, stainless steel socket	H				

K L N - 2 □ □

Probe length*	Code
0.5m ... 3m	05...30

K L P - 2 0 4 Probe separator [for KSH-200]

K L P - 2 0 1 Probe separator [for KSH-300 and KKH-200]

4.3 Accessories


4.3.1 Accessories of the device

- User's manual
- EU declaration of conformity
- Warranty Card

4.3.2 Accessorioies of the separate purchased probes

- Sealing [2 mm thick, KLINGER OILIT]: 1 pc. □" [for KSP-201, KSS-201, KSN-201] and 1 pc. 1½" for a KSH-200.
- M6 nut (standard SW): 3 pcs. for KSH-202, 4 pcs. for KSH-203, KSH-204.
- M6 nut non-st. SW: 1 pc. for KSH-204.

4.4 Dimensions

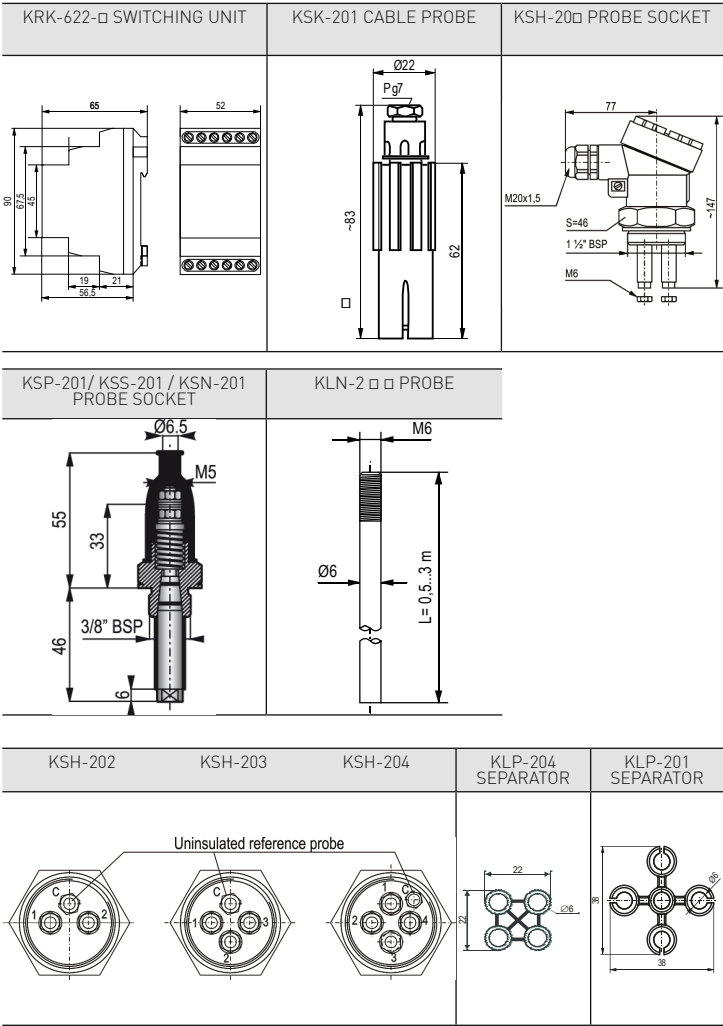


5 Installation

A KRK-622-□ switching unit can be mounted on DIN EN 60715 rail. It is recommended the KLN-2□ □ type probes to be cut to the length required for level detection on site. The probes should be screwed into the KS □-□ □ type sockets. ALWAYS REMEMBER TO TIGHTEN THE PROBE WITH AN M6 NUT! When using KSH-204 type probe sockets the reference probes should be tightened with special SW hexagonal M6 nuts! It is suggested KLP-201 or KLP-204 type PVDF separators (suitable up to +130 °C) to be used at every 0.5 m for multiple probe devices to keep the probes apart. A KSK-201 single probe, attached to an insulated cable, can be lowered into pits and wells without running the risk of a short circuit. When a detection is needed in a well or in a plastic pipe 2 of them have to be used. For additional levels additional probes should be used.

6 Electrical connection

If the wall of the tank is conductive no reference probe is needed. In this case terminal "C" has to be connected to the tank. On multiple probe units E1 and E2 are marked with 1 – 4, the reference probe is marked with "C". Admissible length of cable between switching unit and probes depends on cable capacitance and conductivity. The terminal block assignment of KRK-622-1 and KRK-622-4 is not the same. There is no "S" terminal at the KRK-622-1. Referring to the illustration below for the terminal block assignments of the devices.

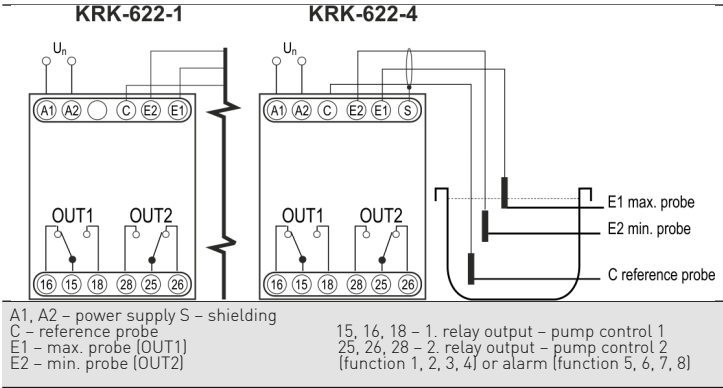


To eliminate signal interferences it is recommended to use shielded cables to the probes.


7 Putting into operation

7.1 Settings

The green LED (Un) shows that the unit is on, the energised state of the relays are indicated by the OUT1 respectively OUT2 LEDs. If the OUT1, OUT2 (red) LEDs are flashing, they indicate the timer operation. When they light up, it shows that the corresponding relay is switched on. Yellow LED [FAIL] indicates probe failure [for example at Functions 5 and 6 probe E1 is flooded and probe E2 is not, which is unreal state so the yellow LED is on.] Operating modes, delay ON and delay OFF can be set with the DIP switch on the front panel. t1[s] and t2[s] potentiometers are for adjusting the delay time. The delay value can change from 0.5 seconds to 10 seconds. You can set the sensitivity of the two probes independently using the RE1 or RE2 potentiometers. The sensitivity setting should comply with the conductivity of the fluid. Do not set sensitivity higher than required because the vapour precipitation may lead to operation disturbance. In heavily humid environment insulated probes can be used. With the ON Delay / OFF Delay switch on the DIP switch, delay type of the relays can be selected (switch-on delay or switch-off delay).

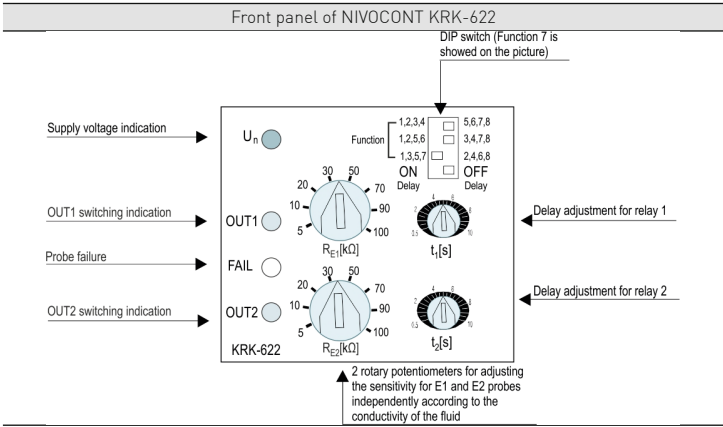


Example of setting DIP switch:
Select the desired function in accordance with the figures. The upper 3 switches are for selecting the number of the function you want to use. If you want to use Function 5 you should set the switches as follows: set the 1st switch to the right, the 2nd to the left and the 3rd to the left. Then select whether you need ON delay or OFF delay with the 4th switch. You can choose the type of delay, but you cannot deactivate the delay. However, the minimum delay time you can set with the potentiometers is 0.5 seconds. The DIP switch looks like this after setting function 5 with an OFF delay:

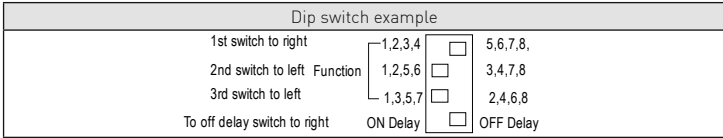


7.2 Functions


Attention! The following wiring diagrams show the wiring of the KRK-622-4, 24V supply voltage device.

Functions 1 to 4 are for controlling 2 pumps according to the following picture:

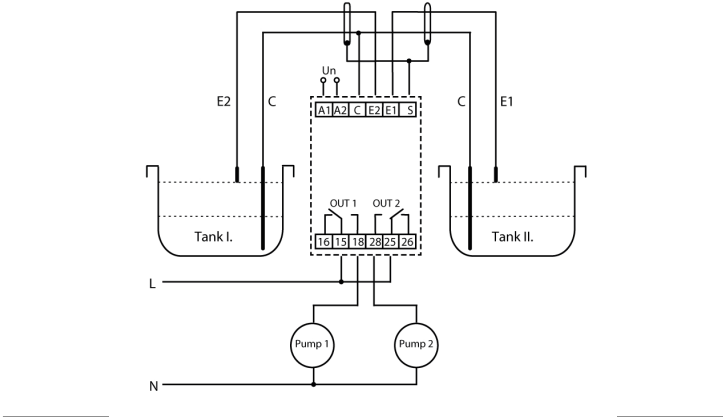

Functions 5 and 6 are for controlling one pump (filling or emptying one tank) and for generating alarm signal according to the following picture. If level is not between E1 and E2 alarm is generated:

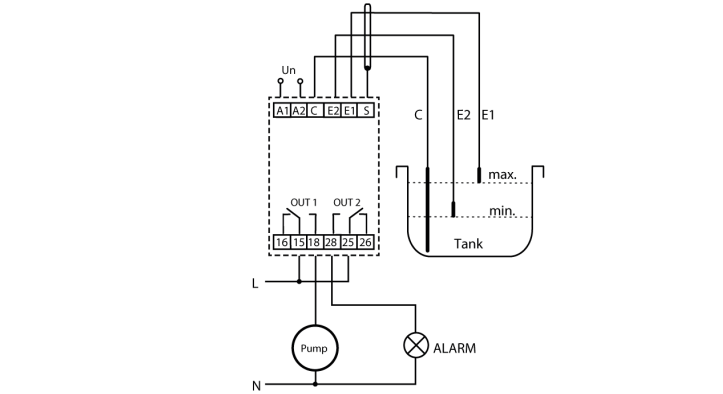

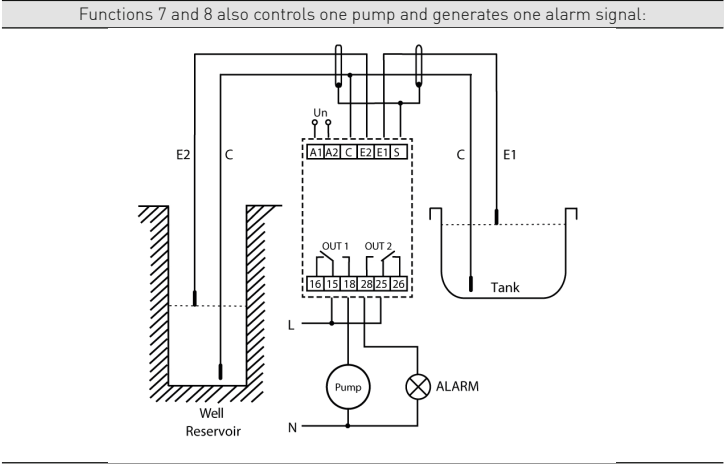

FUNCTION 1:
Controlling level in 2 separate tanks (each with 1 probe) - filling. The pumps are running and fill the tanks until the levels reach the corresponding probes (E1 or E2).
Relay 1 (E1): Pump control 1
Relay 2 (E2): Pump control 2

FUNCTION 2:
Controlling level in 2 separate tanks (each with 1 probe) - emptying. The pumps are running and emptying the tanks until probes are flooded.
Relay 1 (E1): Pump control 1
Relay 2 (E2): Pump control 2

FUNCTION 3:
Controlling level in 2 separate tanks (each with 1 probe). Pump 1 is emptying the tank and stops when probe E1 is not flooded anymore. Pump 2 is filling the tank and stops if level reaches probe E2.
Relay 1 (E1): Pump control 1
Relay 2 (E2): Pump control 2

FUNCTION 4:
Controlling level in 2 separate tanks (each with 1 probe). Pump 2 is emptying the tank and stops when probe E2 is not flooded anymore. Pump 1 is filling the tank and stops if level reaches probe E1.
Relay 1 (E1): Pump control 1
Relay 2 (E2): Pump control 2

FUNCTION 5:
Both probes and reference probe are in one tank. Relay 1 controls the pump, which keeps the tank filled and maintains the level between probes E1 and E2. Relay 2 is used to alarm signalling. Relay 2 is on if the level is not between the two probes.
Relay 1 (E1): Pump control 1
Relay 2 (E2): Alarm


FUNCTION 6:
Both probes and reference probe are in one tank. Relay 1 controls the pump, which keeps the tank empty and maintains the level between probes E1 and E2. Relay 2 is used to alarm signalling. Relay 2 is on if the level is not between the two probes.
Relay 1 (E1): Pump control 1
Relay 2 (E2): Alarm

FUNCTION 7:
Pumping from well to the tank - probe E2 is in the well, probe E1 is in the tank. The pump only runs if probe E2 is flooded (enough water in the well) and the tank is not full meaning the level does not reach probe E1. The alarm reports a lack of water in the well (probe E2 is not flooded).
Relay 1 (E1): Pump control 1
Relay 2 (E2): Alarm


FUNCTION 8:
Pumping from reservoir to the tank - probe E2 is in the reservoir, probe E1 is in the tank. The pump only runs if probe E2 is flooded (full reservoir) and the tank is not full (probe E1). The alarm reports the status of full tank and reservoir (both probes are flooded).
Relay 1 (E1): Pump control 1
Relay 2 (E2): Alarm

7.3 Time diagrams

 
FUNCTION 1, 3, 4 – PUMP UP (FILLING), ON DELAY:

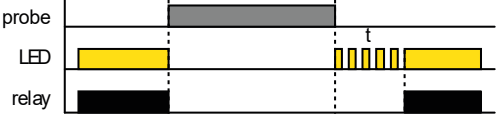

 
FUNCTION 1, 3, 4 – PUMP UP (FILLING), OFF DELAY:

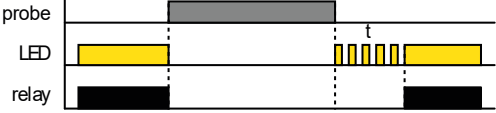

 
FUNCTION 2, 3, 4 – PUMP DOWN (EMPTYING), ON DELAY:

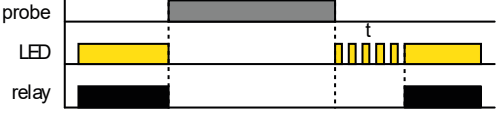

 
FUNCTION 2, 3, 4 – PUMP DOWN (EMPTYING), OFF DELAY:

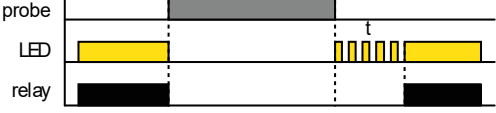


FUNCTION 5 – PUMP UP (FILLING), ON DELAY:

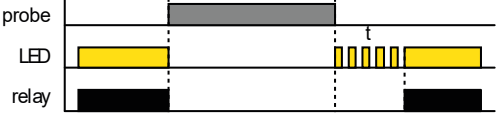 


FUNCTION 5 – PUMP UP (FILLING), OFF DELAY:

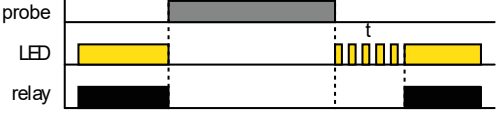 


FUNCTION 6 – PUMP DOWN (EMPTYING THE TANK), ON DELAY:

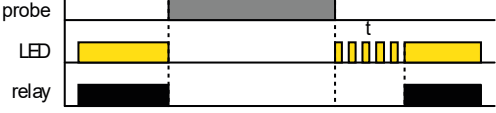 


FUNCTION 6 – PUMP DOWN (EMPTYING THE TANK), OFF DELAY:

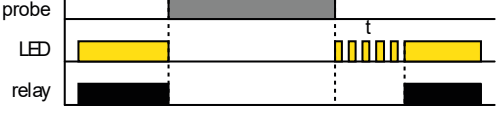 


FUNCTION 7 – PUMP FROM WELL TO TANK, ON DELAY:

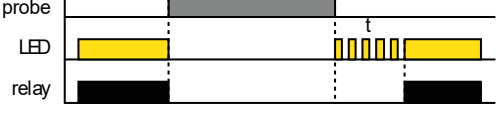 


FUNCTION 7 – PUMP FROM WELL TO TANK, OFF DELAY:

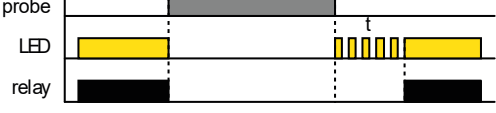 

FUNCTION 8 – PUMP FROM RESERVOIRS TO TANK, ON DELAY:

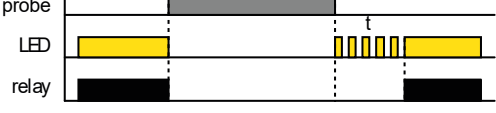 

FUNCTION 8 – PUMP FROM RESERVOIRS TO TANK, OFF DELAY:

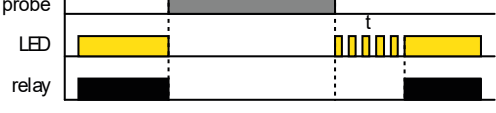 

8 Maintenance and repair

The device does not require regular maintenance. Repair within and beyond the warranty period is carried out at the manufacturer's premises only.

9 Storage conditions

Storage temperature: -30 °C ... +70 °C. [-22 °F ... +158 °F]

Relative humidity: max. 85%.